
OPC- 617 OPC-1939 Connections for the F-121 / F-221 Radio
Will also work with IC-F6011 & IC-621

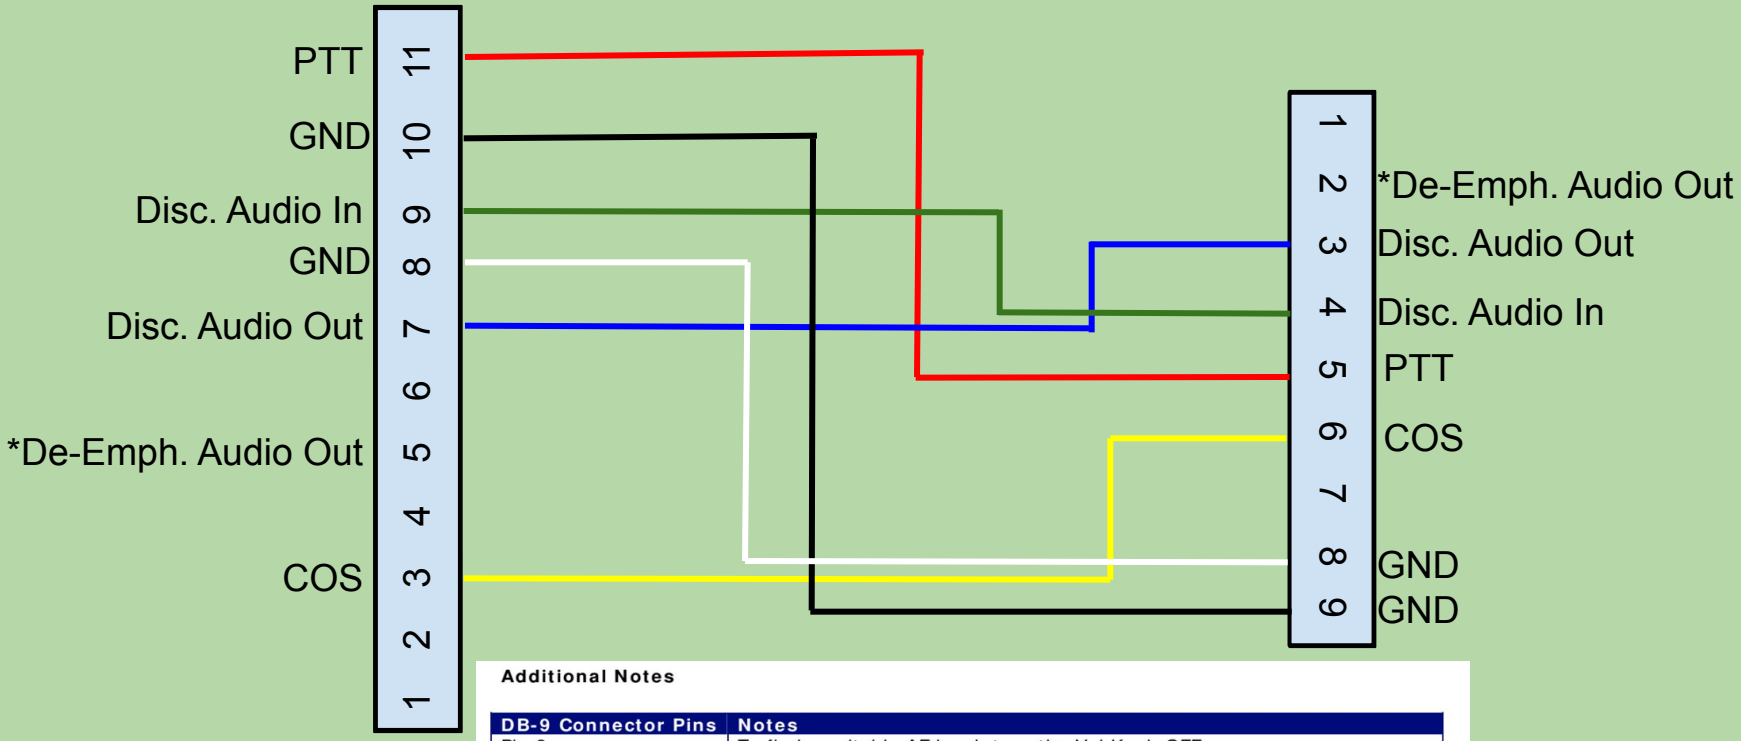

Additional Notes

DB-9 Connector Pins	Notes
Pin 2	To find a suitable AF level, turn the Vol Knob OFF Change the AF Min level (in Set Mode) until a suitable level is found.
Pin 4	Solder Bead F for data. Solder Bead D for AF in.
Pin 5	To enable an external PTT: In **Common** -> **Expert**, set **EPTT/ FTSW** to **EPTT**. If you require a delay after releasing PTT, set a value in the **EPTT Delay Timer**.
Pin 6	To set Pin 6 as a Carrier Operated Relay: Disable the 2/5-tone function for the selected channel. In **Common** -> **Expert**, set **RX EXO** to **ON** and the **Delay Timer** to **OFF**. This enables COR to react instantly to the signal when it switches on and off.